





WHAT'S IN THE BOX							
Torque wrench		1 Set	Screws and plastic anchors (4pcs)	iiii ttt	1 Set		
Mounting template sheet	(* ; ;	1 Set	Quick Setup Guide		1 Set		

NOTE: Download all your support materials and tools in one place

- 1. Go to: http://www.digital-watchdog.com/resources
- 2. Search your product by entering the part number in the 'Search by Product' search bar. Results for applicable part numbers will populate automatically based on the part number you enter.
- 3. Click **'Search'**. All supported materials, including manuals and quick start guide (QSGs) will appear in the results.

Attention: This document is intended to serve as a quick reference for initial set-up. It is recommended that the user read the entire instruction manual for complete and proper installation and usage.

Tel: +1 (866) 446-3595 / (813) 888-9555

9:00AM - 8:00PM EST, Monday thru Friday

Technical Support Hours:

digital-watchdog.com

STEP 1 - PREPARING TO MOUNT THE CAMERA

- 1. The mounting surface must withstand five times the weight of your camera.
- 2. Do not let the cables get caught in improper places or the electric line cover can be damaged. This may cause a short or fire.
- 3. Using the mounting template sheet or the camera itself, mark and drill the necessary holes in the wall or ceiling.

STEP 2 – CABLING THE CAMERA TO EXTERNAL DEVICES

Pass the wires through the mount bracket and make all necessary connections. Connect the BNC cable and power cables to the camera.

Power Requirements	Power Consumption	
DC12V	DC12V (LED off): 2W, 176mA DC12' (LED on): 3.9W, 333mA	

STEP 3 – CHANGING THE SIGNAL IN THE CAMERA

- 1. The camera supports HD-Analog, HD-CVI and HD-TVI signals. To switch between the signals:
 - a. Enter the camera's OSD menu. You can access it locally from using the camera's joystick in the body of the camera, or from a recorder supporting UTC communication. Go to SETUP > OUTPUT > ANALOG MODE.
 - b. Set the camera's analog signal output from the following options:
 - HD-A: supports 5MP/1944p @ 20fps and 12.5fps, 4MP/1440p @ 30fps, 2.1MP/1080p @ 30fps and 720p @ 30fps.
 - HD-T: supports 5MP/1944p @ 20fps, 4MP/1440p @ 30fps, 2.1MP/1080p @ 30fps and 720p @ 30fps.
 - HD-C: supports 4MP/1440p @ 30fps, 2.1MP/1080p @ 30fps and 720p @ 30fps.
 - CVBS: supports up to 960H @ 30fps

STEP 3 – CHANGING THE SIGNAL IN THE CAMERA (cont.)

- c. Change CONFIRM to ON to save the changes.
- d. Go to the EXIT menu and select SAVE&EXIT to save all changes. The camera signal automatically.

\sim			
	OUTPUT		
	FRAME RATE FREQ	1440p 60HZ	30
	ANALOG MODE CONFIRM	HD_T 0FF	
	RETURN	4	

STEP 4 - INSTALLING THE CAMERA

- Once all cables have been connected, use the screws included with the camera to properly mount and secure the camera to the mounting surface.
- 2. To adjust the camera's tilt, loosen the screws at the base of the camera's bracket. The camera's max angles are:

Pan: 0°~ 360°

Tilt: 0°~ 90°

