

CAM-BOX™ KIT for Installation of a Security Camera

For installation of most security cameras on suspended ceilings, drywall ceiling, exterior soffits, or wall.



FEATU		


- Designed to install security cameras to a suspended ceiling panel – fast with a 4" hole saw
- Rated up to 50 lbs on a suspended ceiling (or drywall ceiling) in combination with the drop wire for support
- Rated up to 10 lbs on a drywall ceiling without drop wire
- Rated up to 7 lbs on walls
- For security cameras, it fits any hole pattern because you drill the holes in the appropriate location in the flange, cameras with mounting holes set wider than 4.5" apart install directly to the box flange
- Mounting wings hold bracket securely against wall when screws are tightened
- White, non-metallic, paintable flange box
- Steel version for use where metal raceways are required
- Steel version installs with 4-1/2" hole saw
- 1/2" and 3/4" knockouts
- Box rotates in either direction for proper camera position

CATALOG NUMBER	UPC/DCI/NAED MFG #018997	DESCRIPTION/ CUBIC INCHES	UNIT PKG	STD PKG	DIM A	DIM B	DIM C
FLC430*	09742	Non-Metallic / 27.0	1	10	7.380	3.085	1.331
FLC430S	09743	Steel / 17.0	1	10	7.345	2.375	1.688

*Add suffix "GC" to Catalog # when ordering in Canada, for example FLC430GC. Kit includes 12' of drop wire, box, bracket, mounting plate, and installation screws. Non-metallic box also includes (2) NM94 cable connectors.

PATENTED



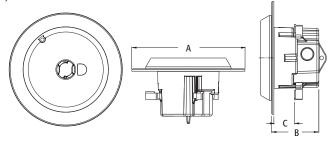

Installation Instructions - FLC430 for Security Cameras



Cut hole in a ceiling grid with 4" hole saw. 4-1/2" for steel.



Install CAM-BOX™ kit. Rotate to desired position. Tighten mounting wing screws.



Add drop wire to loop. Attach to framing member above.



Add bracket to the box using screws provided.



Attach camera to mounting plate (screws provided). Box fits any camera hole pattern because <u>YOU</u> drill the holes in the appropriate location in the flange.



With camera mounted, install the mounting plate to the box by placing it on the bracket and turning clockwise to lock. Install set screw.



Finished installation.

For camera installations on existing boxes, check out our CAM-KIT™ camera mounting kit on page M-4



